

User Manual

For electronic digital lock safes




How to open safe


- ① To open a safe, press ENTER + 7777 + ENTER. (Green light is displayed on the lamp)
- ② Then you can hear OK melody sounds.
- ③ Turn your key to the right in the lock within 4 seconds and open.

How to set your personal code

The initial user code is 7777 set by the factory.
For your security purpose, please change this to your own personal access code immediately before using the safe. You can set the code from 4 up to 16 digits.

 → 1234 → ENTER → Confirmation melody → Complete

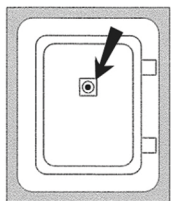

- ① Open the safe door and press BLACK button  placed on the back of door, using sharp pen tip or other similar objects.
- ② Remain the door open, please input new personal access code. (Ex: 1234)
- ③ Press ENTER button, then your entry is complete.


Confirmation of your entry

Press ENTER → 1234 → ENTER and open the safe.

※ Before you close the door, please check your new access code has been entered correctly.
Please leave the door open and try your new code more than 3 times.

※ If wrong code is entered more than 3 times successively, the digital will stop operating for 10 minutes.

How to change the battery

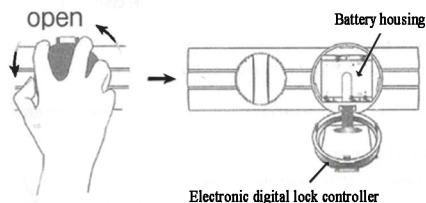

- ① When battery is low, red light is displayed on the lamp.
- ② The battery housing is located behind the round shaped Electronic Digital Lock(EDL) controller.
- ③ Turn EDL controller to the LEFT and change 4 batteries (1.5V) at a time.

※ Expected battery life is approximately 1 year, if using the digital lock under 10 times a day.

User Manual

For electronic digital lock safes



 
How to open safe


- ① To open a safe, press ENTER + 7777 + ENTER. (Green light is displayed on the lamp)
- ② Then you can hear OK melody sounds.
- ③ Turn the handle upwards within 4 seconds to open.

How to set your personal code

The initial user code is 7777 set by the factory.
For your security purpose, please change this to your own personal access code immediately before using the safe. You can set the code from 4 up to 16 digits.

 → 1234 → ENTER → Confirmation melody → Complete

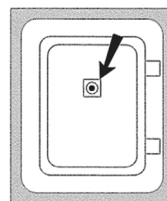

- ① Open the safe door and press BLACK button  placed on the back of door, using sharp pen tip or other similar objects.
- ② Remain the door open, please input new personal access code. (Ex: 1234)
- ③ Press ENTER button, then your entry is complete.

 
Confirmation of your entry

Press ENTER → 1234 → ENTER and open the safe.

※ Before you close the door, please check your new access code has been entered correctly.
Please leave the door open and try your new code more than 3 times.

※ If wrong code is entered more than 3 times successively, the digital will stop operating for 10 minutes.

How to change the battery

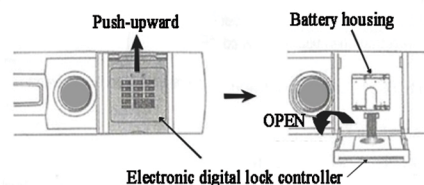

- ① When battery is low, red light is displayed on the lamp.
- ② The battery housing is located behind the square shaped Electronic Digital Lock(EDL) controller.
- ③ Push EDL controller and change 4 batteries (1.5V) at a time.

※ Expected battery life is approximately 1 year, if using the digital lock under 10 times a day.